



**T2702**  
**MJS 7" Android Tablet**




**Instruction Manual**

## 1 Package contents

- 1) 7" Tablet
- 2) AC adapter
- 3) USB cable
- 4) Instruction Manual

## 2 Product overview

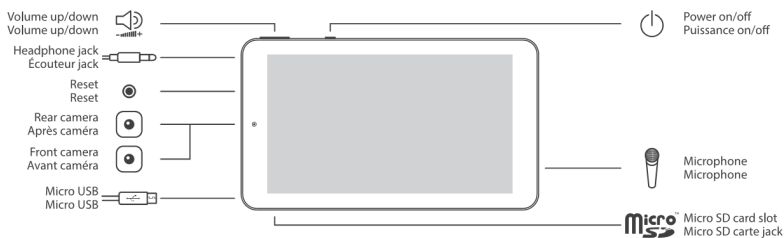 


Control/Jack/Indicator	Basic operation
<b>Volume +/- button</b>	Increase/decrease the volume.
<b>Headphone jack</b>	Connect 3.5 mm headphones to listen to audio.
<b>Reset hole</b>	Insert a paper clip or pin to <b>restart your tablet</b> .
<b>Rear camera</b>	Take photos or record video from the back of screen.
<b>Front camera</b>	Take photos or record video from the face of screen.
<b>Micro USB port</b>	Connect the micro USB cable to charge your tablet or transfer data.


<b>Power on/off button</b>	Press and hold to turn your tablet on/off. Press briefly to lock/unlock the screen. When the tablet is on, press and hold till pop up a menu of “Power off” and “Reboot”, then tap “Power off” to turn off the tablet while tap “Reboot” to <b>restart your tablet</b> .
<b>Microphone</b>	Speak into the microphone to capture your voice.
<b>MicroSD™ card slot</b>	Insert a microSD card to increase your tablet's memory.
<b>Speakers</b>	Play audio from your tablet.

### 3 Start your tablet

- 1) Press and hold the power button till your tablet turns on with a Welcome screen.

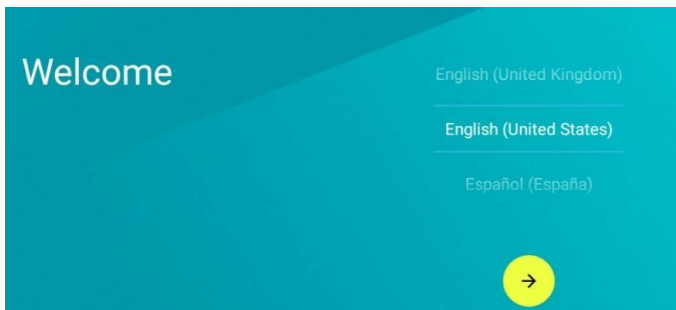

- 2) Swipe up/down the list of languages and select your language.
- 3) Swipe up/down the list of networks, select your network, and enter a 4 characters password in need.


**Note:** You can use your tablet without connecting to Wi-Fi or logging in a Google™ account, but you won't be able to visit  **Play Store** or update software.

- 4) Tap and select the time zone, date and time.
- 5) Enter your first and last name.
- 6) Set the screen lock, referring to

**Tip:** After turn on your tablets, you may skip other steps.



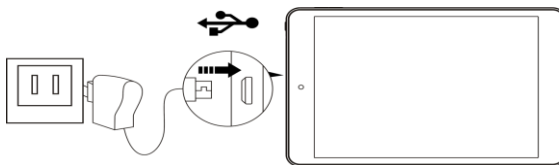


#### 4 Charge your tablet

**Note:** Before charge your tablet for the 1<sup>st</sup> time, use your tablet till the battery is completely empty, and then charge it fully, which will help increase your battery life and efficiency. When the battery power is too low, the device will turn off automatically. Please charge if low battery notification appears. To conserve the battery life it isn't recommended to play and charge all at once.











 



Insert the USB plug of supplied cable into the socket of the supplied AC adapter, insert the micro-USB plug into the micro-USB port of your tablet, and insert the AC plug into an AC receptacle. The device will be charged automatically with a charging battery icon displayed on the right upper screen, and it will take approximate 3 hours till the battery power is full.

**Tip:** For battery saving, turn off Wi-Fi, close Apps that you aren't using, shorten the display time, and lower the brightness.





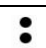


To check the battery power balance, tap  **Apps** >  **Settings** >  **Battery**. To show the battery percentage in the status bar, click **Battery Percentage**. To Turn on the battery saver, tap  **Options** > **Battery saver** and drag  to **ON**, but it turns off automatically when charging your tablet.

## 5 Navigate with OSD

	USB port is connected.
	Wi-Fi connection and how strong of signal.
	Power balance of battery and if charging or not.
	Start a text search on Google™.
	Start a voice search on Google™.
	Return to the home screen.
	Capture a screenshot.
	Return to the previous screen.
	Access all Apps
	List the Apps running recently.
	Display the menu of options.
	Open the side menu.











## Tip: Gesture




<b>Tap</b> 	Tap an app or another item with your finger to open or select it.
<b>Double Tap</b> 	Enlarge or shrink the display size.
<b>Touch &amp; Hold</b> 	Touch an item with your finger and do not release it until your tablet responds.
<b>Drag</b> 	Touch and hold an item and then move your finger to where you desire.
<b>Swipe</b> 	Quickly slide your finger either vertically or horizontally across the screen.
<b>Pinch</b> 	Pinch your fingers together or move them apart.
<b>Rotate</b> 	Turn your tablet sideways to switch between landscape and portrait. If not switch, swipe down from the screen top, tap <b>Landscape/Portrait</b> to switch to <b>Auto-rotate</b> .

## 6 Use the keyboard



Keyboard is automatically open when text or numbers in need.




	Switch between uppercase and lowercase letters.
	Switch to between number and symbol mode. Tap <b>ABC</b> to open the standard keyboard.
	Change the keyboard language.
	Close the keyboard.
	Delete a character. Tap and hold to delete all characters.
	Open the emoji keyboard. Tap <b>ABC</b> to open the standard keyboard.
	Confirm that you are finished entering information.
	Search for the input text.






To change Google™ keyboard language, tap  **Apps** >  **Settings** > **Language & Input** > **Google keyboard** > **Languages**, drag  to disable **Use system language**, and enable other language.




To change current keyboard, tap  **Apps** >  **Settings** > **Language & Input** > **Current Keyboard** to pop up a list of current keyboards, and then tap one to select your keyboard. You may tap **CHOOSE KEYBOARDS** in the window to add more keyboards. Tap a keyboard to set it up.


You may directly access the keyboard settings. On the keyboard, touch and hold **/ Slash** or **, Comma** till pop up  **Settings** then release your finger, a window of keyboard settings will pop up.

## 7 Connect to a Wi-Fi network

- 1) Tap  **Apps** >  **Settings** >  **Wi-Fi**.
- 2) Drag  to turn on Wi-Fi, and then your tablet will search and show networks with  Indicating the signal strength and if secured or not.

**Tip:** Tap  **Options** > **Refresh** to refresh for more networks.

- 3) Select a network, input the password if in need, tick if show password, and tap **CONNECT**. When connected, **CONNECTED** will appear below the network name, and Wi-Fi connection icon will appear in the status bar. This network will be saved for next automatic connecting.

To add a network, tap  **Options** > **Add network**. input the SSID, and select the type of security from the drop-down menu:  
**None** - No security


**WEP** - Wired Equivalent Privacy

**WPA/WPA2 PSK** - WiFi Protected Access




**802.1xEAP** - 802.1 x Extensible Authentication Protocol

If tick **Advanced options**, select the type of proxy from the drop-down menu: **None**, **Manual**, or **Proxy Auto-Config**, and select the type of IP settings: **DHCP** or **Static**.

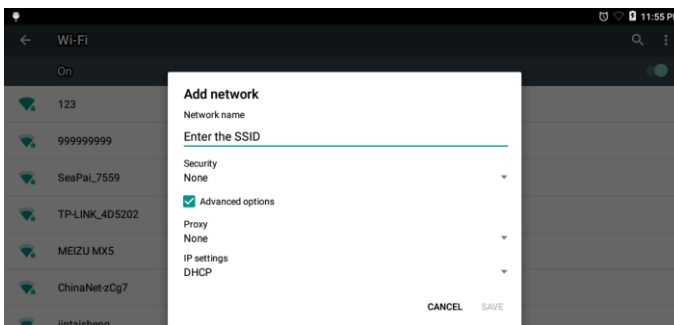


Finally tap **SAVE** to save it in **Saved networks**.





**Tip:** Swipe from the screen top to drop down a menu showing network names, and tap one to connect.

To turn/off **Airplane mode**, tap  **Apps** >  **Settings** > ... **More**, and drag  to on/off.

**Tip:** Swipe from the screen top to drop down a menu showing **Airplane mode**, and tap it to turn it on/off.



To set a tethering & portable hotspot, tap  **Apps** >  **Settings** > ... **More** > **Tethering & portable hotspot**, drag  to on, tap **Set up Wi-Fi hotspot** to pop up a menu, rename the network, select the type of security from the drop-menu: **None**

or **WPA2 PSK**, enter the password, and tick if show password, then tap **SAVE**.

To set VPN, tap  **Apps** >  **Settings** > ... **More** > **VPN** > + to pop up a menu, enter the name, select the server address from the drop-menu, tick MPPE, tick MPPE then enter DNS domain and serves from the drop-menu, finally tap **SAVE**.

**Tip:** Tap **:** **Options** > **Always-on VPN** to turn on/off VPN.


## 8 Install apps

Tap  **Apps** >  **Play Store**, search for an App or browse categories to find and install it.


**Note:** Assure WiFi connected and a Google™ account logged in. For protection only download from trusted sources.


To update an app, tap  **Apps** >  **Play Store** > **Menu** > **My Apps** > **App name** > **UPDATE** > **CONTINUE/ACCEPT**.

**Note:** No update heading means your Apps are up-to-date. You may tick the check box for **Allow automatic updating**.




To view an app information, tap  **Apps**, drag the app icon into **Information** on the upper of screen when both **Information** and the icon become blue then release your finger, the app info will display in a page.

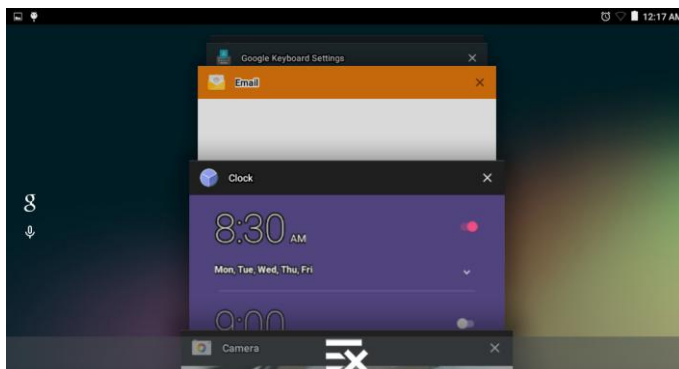

To view recent apps, tap  **Recents**. Swipe the screen up/down to turn pages. To open an app, tap its page. To close an app, drag the screen left, right, or tap right upper **X**. Tap the bottom **X** to close all pages and go back to home screen.



**Note:** Too many apps running may slow your tablet and shorten the battery life.





To force stop/uninstall/clean an app, tap  **Apps** >  **Settings** >  **Apps**, tap the app then tap **Force stop** / **Uninstall** / **Clear cache** / **Clear data** > **OK**.



**Tip:** The pre-installed Apps are not able to be removed but disabled by tap **DISABLE**.

## 9 View web pages





- ①Open new window   ②Close   ③Previous/Next webpage
- ④Refresh/Close   ⑤Message of webpage   ⑥Input field
- ⑦Bookmark   ⑧Search   ⑨Bookmark/history   ⑩List of browser

With a Wi-Fi network connected, tap  **Apps** >  **Chrome** or other installed browser. Tap the searching bar with keyboard displayed, type the website, and then tap . Or tap  and then speak to search.

As you type matching characters are highlighted. Tap   to go to previous or next matching item. You may touch and hold the text till covered in a blue ribbon, drag the blue selectors to the left/right to select text, tap **Copy** on the screen top, then go to where to paste it click **Paste**.

## History

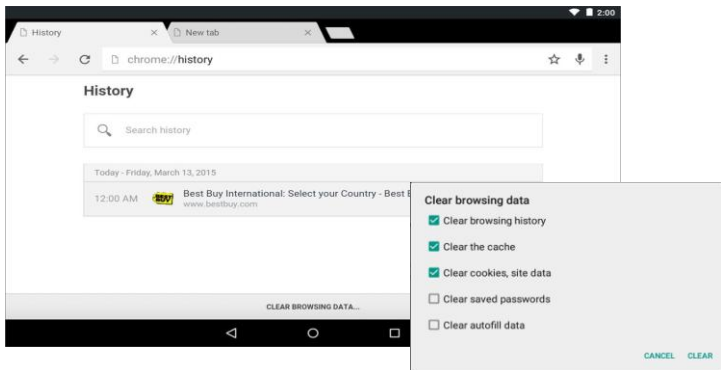 


Tap : **Options** > **History**, tap a website to open the page, tap  to search for a website, tap **x** to remove a single website.

To clear history, tap **CLEAR BROWSING DATA...** Select the kinds of data you want to delete, and then tap **Clear**.

## Bookmark

On the webpage tap ★ in the searching bar to pop up a menu of **Add bookmark**. Name the bookmark, select the folder and tap **Save**.

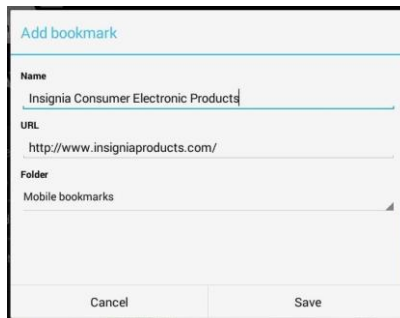

To open a bookmark, tap ⋮ Options > **Bookmarks**, then tap the website.

## Download

 
Tap ☰ **Apps** > ⬇️ **Downloads** to view the download list, and you may tap the file to open it. Tap and hold a file, then tap ➦ **Share** > **Android** / **Drive** / **Gmail** to share it. To delete it, tap 🗑️.

## 10 Use email

- 1) To add an account, with a Wi-Fi network connected, tap ☰ **Apps** > 📧 **Gmail** > **Add a email address** or tap ☰ **Apps** >

⚙️ **Settings** > 👤 **Accounts** > + **Add account** to pop up a list of email providers.

- 2) Select Gmail or other email provider and tap **NEXT**.
- 3) Enter your email address, password, server, security type and port.

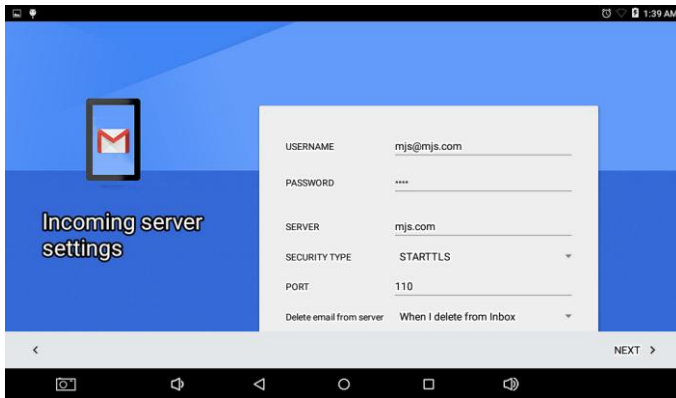



**Tip:** In the latter way you may tick **Auto-sync data**.

**Note:** For some email provider you need install certificate.

 
To change an account setting, Tap ☰ **Apps** > 📧 **Gmail** > ☰ **Menu** > ⚙️ **Settings**, tap the account and change settings in need.





To delete an account, tap ☰ **Apps** > ⚙️ **Settings** > 👤 **Accounts**, tap the email provider and the account, then tap : **Options** > **Remove account**.


To view emails, tap ☰ **Apps** > 📧 **Gmail** to open last email box. You may tap the left upper ☰ **Menu** for a different account.

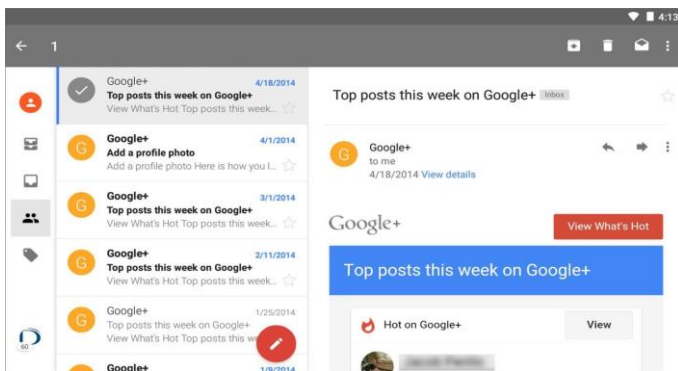Drag your finger up/down to scroll through your emails, tap an email to open it, tap  **Menu** to display folders, and tap  to search.

To edit an email, touch and hold an email till display options to archive, delete, mark as read or unread, or move the email, then tap **V DONE**.







To write a new email, tap  **Apps** >  **Gmail** >  **Compose**, input email addresses, subject and messages, then tap  **SEND**. For more recipients, separate them with a comma. When typing address the matching contacts may display for you to tap directly.








To save an email, tap  **Menu** > **Save draft / Return**. Tap  **Menu** > **Drafts** to access it.

## Contacts



Tap  **Apps** >  **Contacts**. Tap  or say a name to search for a contact. Tap right lower  to add a new contact. Tap a contact to view or edit information.

## 11 Use the camera

 
 
Tap  **Apps** >  **Camera**. swipe from the screen left to display  **Camera** /  **Video**, and tap  **Camera** /  **Video** to switch between taking photos and taking videos. You may set the camera by tapping  **Settings**.



**Resolution & Quality:** Select resolution for photo/video via rear/front camera.



**Save location:** Select on/off.

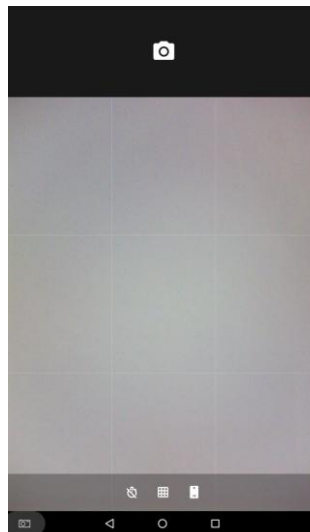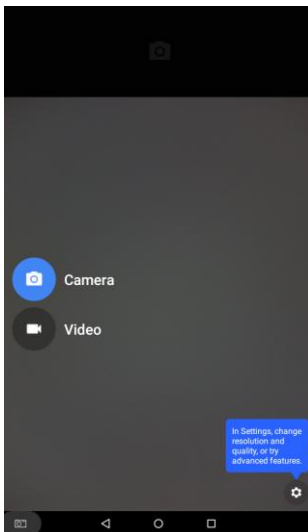
**Advanced:** Select on/off for manual exposure.

**Help & Feedback:** View help info or feedback online.



Tap  to take a photo. Or tap  to start and end recording a video. Tap the bottom command bar to exit.

You may tap **:** **Options** after swipe left to retract  & .

 Select 0S/3S/10S as shot time for **Camera**

 Display the gridlines or not.

 Switch between front and rear cameras.



**To capture screen, Tap  Screenshot.** To show the button of  **Screenshot**, tap  **Apps** >  **Settings** >

**ScreenshotSetting**, and tick **if show the screenshot button in the status bar**.

You may tap **Select delay time to capture the screen** to pop up a window listing 15 seconds later, 30 seconds later, 1 minute later, 2 minutes later, 3 minutes later, 4 minutes later, and 5 minutes later. Tap one to select.

You may tap **Set the location of screenshot storage** to pop up a window listing **Nand Flash**, **SD Card**, and **USB Storage**. Tap one to select.

## 12 View Photos/videos

Tap  **Apps** >  **Photos**. and drag your finger to browse. Tap a photo/video thumbnail to view/play in full screen. To zoom in or out, pinch your fingers together or apart. Tap **X** to close the photo.

Tap **:** **Options** to show as below:


**Slideshow:** Slideshow the photos in current folder.

 
**Set as....:** Set a photo as wallpaper or contact photo.


**Delete device copy:** Delete the selected/current photo.

To share photos/videos, tap  **Share** > **Android** / **Drive** / **Gmail** to share it.



To edit photos/videos, tap  **Edit** to pop up a menu.

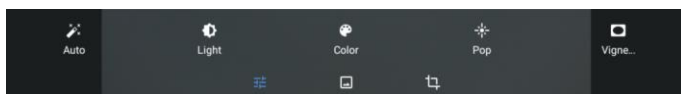 
Tap , and then tap **Auto** / **Reset** to switch between auto setting and reset. Tap **Light** / **Color** / **Pop** / **Vignette** to drop down a bar, and then drag on the bar to adjust the level.




Tap  to show a list of photo effects. Slide left/right and tap one to select a photo effect, and then drag on the bar to adjust the level.





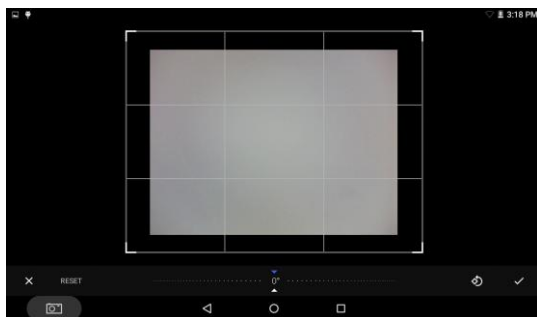



Tap , drag the photo to move/enlarge/reduce the photo, drag the frame to adjust the display size, drag on the bar to rotate the photo to any angle, each time tap  to rotate the photo 90° counterclockwise, tap **Auto** / **Reset** to switch between auto setting and reset.





Tap **V** to save while tap **X** to exit.

To view details about photo/video, tap  **Information** to show such as time, location, etc.

### 13 Listen to music

 
Tap  **Apps** >  **Play Music** >  **Menu** >  **My Library** to view your music, tap a category and select a song to start playback. Tap  to pause while tap  to resume playback. Drag the progress bar to any playback point you desire.

While listening to a song, you may tap  to turn shuffle on or off, tap  to cycle through repeat modes: **Repeating all songs** / **Repeating current song** / **Repeat is off**.



You may tap  **Options** > **Add to playlist** or create a new playlist.

 
### 14 Manage files

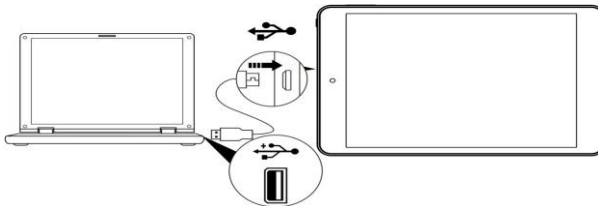


To transfer data, connect your tablet to a **PC or a USB disc** with the supplied USB cable. For **Windows** open **My Computer**, for **Mac** open **Finder**, then click your model number T2702 to view or transfer files. When no accessing data eject your tablet before unplug.



You can copy an e-book file in PDF, EPUB, TXT, RB2, RTF, or PDB format from the computer to a folder on your tablet.

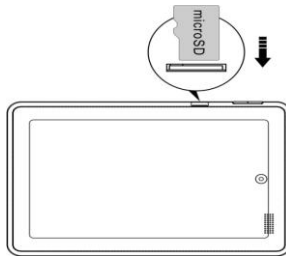**Insert a micro SD card** with the label facing back of your tablet with a click. Tap **Cancel** with no change, while tap **OK** to go to **Storage** settings for where your tablet write files. To remove the card, tap  **Apps** >  **Settings** > **Storage** > **Unmount SD card** > **OK**, and push the card in then release.





To access files, Tap  **Apps** >  **Explorer** >  **Home** > **Internal Memory / SD card / USB storage**, and navigate to the file.

To operate files, select the file or file path, press file or folder over 2 seconds, select Multi, file/folder, Editor, and perform function in the list.

To handle files, touch and hold the file to pop up the function list to perform **Copy**, **Delete**, **Move**, **Paste**, **Rename**, **Send**, **Create** or **shortcut**.

To uninstall a file, download “APK Install”, click the file under the app to uninstall.

## 15 View storage spaces



Tap  **Apps** >  **Settings** > **Storage**. Tap **Apps** to show the apps list, and tap an app to view its information. You may Force Stop, Disable, Clear Data, Clear Cache, Clear Defaults, or uninstall it.




Tap **Pictures, videos, Audio, Download , Cached data, or Misc.** to check and delete files.

Tap **SD card / USB storage** to view the files on the SD card.  
Tap **Erase SD card / USB storage** to erase all data on the SD card.


To free up storage space, you may also clean your browser history or move files to micro SD card, USB disc and PC.




## 16 Set up your tablet

- 1) **Select your system language:** Tap  **Apps** >  **Settings** > **Language & Input** > **Language**, tap your language to select.


Tap **Spell checker**, drag  to **On/Off** to turn on/off the spell checker. Tap **Languages** and select your language for spell checker. For **Google Spell Checker** tap  **Settings**, and drag  to **On/Off** to activate/inactivate Google spell checker to use entries from your contact list to look up contact names.

To add a word into the personal dictionary, tap **Personal dictionary** > **+ ADD**, and type a word. You may type a short name, and tap **DELETE** to delete the word.

Tap **Current Keyboard** > **CHOOSE KEYBOARDS**, drag  to **On/Off** to active/inactive **Google Hindi Input**, **Google Japanese Input**, **Google Korean Input**, **Google Pinyin Input**, **Google voice typing**, and **Japanese IME**.




Tap **Google keyboard** > **Languages**, drag  to **On** to keep Google keyboard using system language, while drag  to **Off** to active input language, and drag  to **On/Off** to select languages for Google keyboard.

Tap **Google keyboard** > **Preferences/ Appearance & Layouts / Appearance & Layouts / Gesture Typing / Text correction / Advanced** to set up.

Tap **Language & Input** > **Voice input** > **Enhanced Google services / Basic Google recognition** >  **Settings** > **Language**, and select your language for voice input, enable “**OK Google**” **detection**, enable **Hands-free**, switch between **ON** and **Hands-free only** for **Speech output**, **Block offensive words** or not.

Tap **Language & Input** > **Text-to-speech output** >  **Settings**, and select your languages for text-to-speech, tick

**Auto-update voices** and **Use Wi-Fi only**, and install voice data for speech synthesis. Tap **Speech rate** to select a speech rate. You may **Listen to an example** of speech synthesis.


- 2) **Set the date and time:** Tap  **Apps** >  **Settings** > **Date & time**, drag  to **On/Off** to enable/disable **Automatic date & time**.




**Note:** When **Automatic date & time** is off, it's available to set date/time.

Tap **Date & time** > **Set date** to pop up the calendar, swipe up/down to find a date, tap it, and tap OK.







Tap **Date & time** > **Set time** to pop up the clock, tap the hour for the 1<sup>st</sup> time, tap the minutes for the 2<sup>nd</sup> time, and tap OK.







 




Tap **Date & time** > **Select time zone** to pop up the list of time zones, tap one to select.

Tap **Date & time**, drag  to **On/Off** to enable/disable to **Use 24-hour format**.

 
To use the calendar, tap  **Apps** >  **Calendar**, tap **+** to add a new event, and tap **:** **Options** > **Refresh** to update your calendar. Tap  **Menu** to select **Schedule**, **Day** / **Week** / **Month** view, or **Search**.

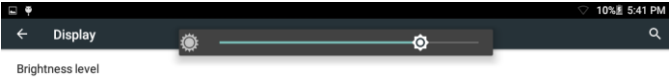





- 3) **Customize the lock screen:** Tap  **Apps** >  **Settings** > **Security** > **Screen lock** to show the screen unlock way.
- None** – Set no lock.
- Swipe** – Set to swipe to unlock.
- Pattern** – Connect at least 4 dots, tap **CONTINUE**, draw pattern again to confirm, and tap **CONFIRM**.
- PIN**: Enter a 4 digits PIN, tap **CONTINUE**, enter again to confirm, and tap **OK**.
- Password**: Enter at least 4 characters, tap **CONTINUE**, enter again to confirm, and tap **OK**.
- Tap  **Apps** >  **Settings** > **Security** > **Make password visible**, drag  to On/Off to make password visible/invisible.
- Tap **Device administrators** to check and deactivate the administrator.
- Tap **Unknown sources** , drag  to on/off to allow/un-allow installation of apps from unknown sources.
- Tap **Install from SD card** to install certificates from SD card.
- Tap **Clear credentials** to remove all certificates.

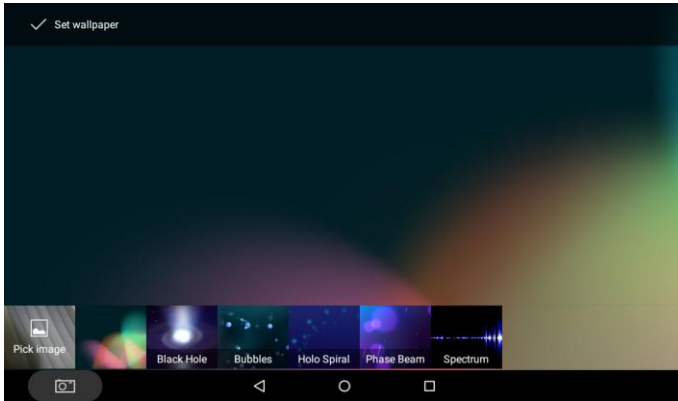 
- 4) **Show your name on the lock screen:** Tap Tap  **Apps** >  **Settings** > **Security** > **Owner info**, tick **Show owner info on lock screen**, type text to display on the lock screen.
- 5) **Set a time to sleep:** Tap  **Apps** >  **Settings** > **Display** > **Sleep** to pop up a menu to select how long before your inactive tablet sleeps: 15 seconds, 30 seconds, 1 minute, 2 minutes, 5 minutes, 10 minutes, 30 minutes, and never.
- 6) **Adjust the screen brightness:** Tap  **Apps** >  **Settings** > **Display** > **Brightness level**. Draw the slider left/right to adjust the brightness.
- 
- 7) **Lock the screen rotation:** Tap  **Apps** >  **Settings** > **Display** > **When device is rotated** to pop up the menu to select if rotate screen contents or not: **Rotate the contents of the screen**, **Stay in current orientation**.  
**Tip:** Swipe from the screen top to drop down a menu showing Auto-rotate, and tap it to switch between auto-rotate and Landscape/Portrait.
- 8) **Change the wallpaper:** Tap  **Apps** >  **Settings** > **Display** > **Wallpaper**, select a picture from **Live**

**Wallpapers, Photos, or Wallpapers**, and tap **Set Wallpaper**. You may slide left/right/up/down to view pictures, and you can pick up recent pictures into the wallpaper list.

 


**Tip:** Tap and hold the home screen to pop up the wallpaper access directly.

 
- 9) **Set a daydream:** Tap  **Apps** >  **Settings** > **Display** > **Daydream**, and drag  to on, select a daydream content: **Clock, Colors, Google Photos, News & Weather, Photo Frame, Photo Table or Photos**, and you may tap  **Settings** to set up each item. Tap **:** **Options**, tap **Start now** to start daydream immediately, while tap **When to daydream** to pop up the menu to select when to daydream: **While docked, While charging, or Either**.

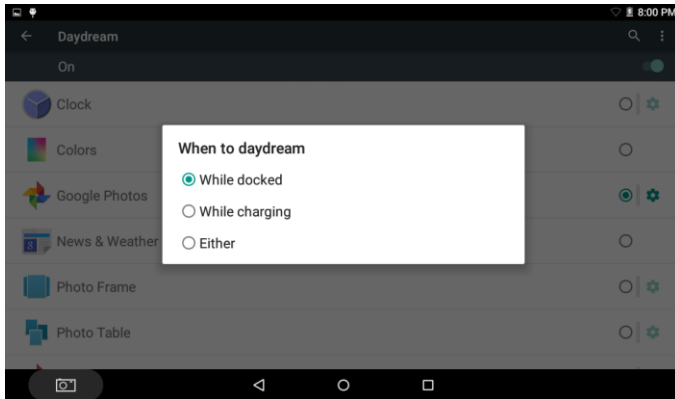

- 10) **Add a shortcut:** Drag the app/widget to the home screen.  
 To cancel the shortcut, drag the icon into **X** on the upper of screen when both **X** and the icon become red then release your finger.

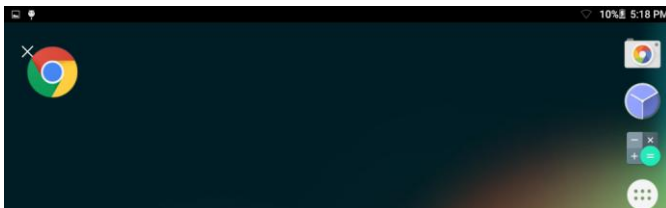 


**Tip:** ① You can drag an icon to where you desire on the screen. ② Tap and hold the home screen to pop up the widget access directly. Tap WIDGETS to display Widget windows. Slide left/right to view widget pages. Tap a Widget window to open it.

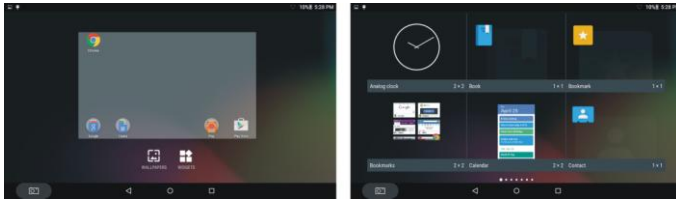



**Note:** Some widgets linked to internet service may occur data cost. Some widgets may only be used in certain countries or under assigned providers.

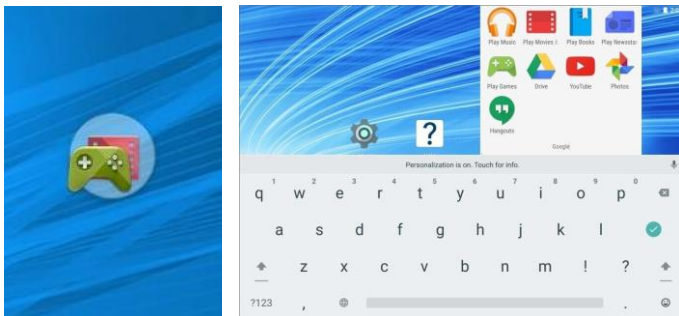- 11) **Create a folder:** Drag an app into another app or folder when the latter is highlighted in a circle then release your finger. You're not able drag the app to the same app, or drag one folder to the other folder.



To name a folder, tap the folder to open it, tap **Create/Unnamed Folder** to open the keyboard and input the name. Tap ✅ when finished.



To remove apps from a folder, open the folder and drag the App back to the home screen. If only one app left the folder will disappear.

- 12) **Adjust the system sound:** Tap  **Apps** >  **Settings** > **Sound & notification**. Drag on the bars to adjust **Media volume**, **Alarm volume**, and **Notification volume**.

Tap **Default notification ringtone** to pop up a menu to select default notification ringtone: Pixie Dust, Pizzicato, Plastic Pipe, Polaris, Pollux, Procyon, Proxima, Radon. Finally tap OK.

Tap **Other sounds** to switch to the page to turn on/off **Screen locking sounds** and **Touch sounds**.

 
- 13) **Set notifications**






Tap  **Apps** >  **Settings** > **Sound & notification** > **When device is locked** to show the options: **Show all notification content**, **Don't show notifications at all**. Tap one to select.

Tap **App notifications** to show the apps list. Tap an app to switch to a page to select **Block**, **Priority** or **Sensitive** for the app notification.

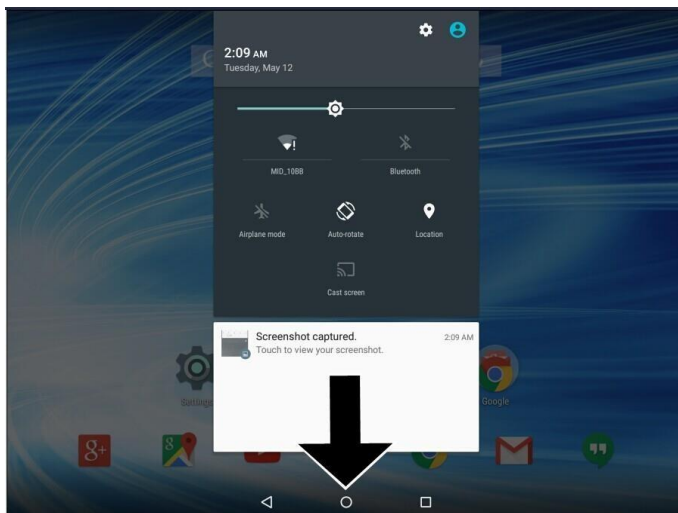Swipe down from the top edge of the screen to pop up a menu of notifications such as email, calendar, time,

brightness, etc., and then swipe down again to display more status items. Swipe up to retract the menu.



- 14) **Open your location:** Tap  **Apps** >  **Settings** > **Location**, drag  to On / Off.
- 15) **Reset to default settings:** Tap  **Apps** >  **Settings** > **Backup & reset** > **Factory data reset** > **Reset Device** to erase all data and restart your tablet.  
**Note:** Before reset, you may tap **Backup account** > **+ Add account** and **Back up my data** to back up your data/settings to Google™ servers, and tap **Automatic restore** to enable/disable restoring backed up data/settings when reinstalling an app.

## **Troubleshooting**

### **What should I do if I cannot turn on my tablet?**

- Connect the charger and check the battery level on the screen. Make sure that the battery is fully charged. If the battery is too low, your tablet will not turn on. Connect your tablet to the power adapter and fully charge the battery.

### **Can I open Microsoft Office and PDF files on my tablet?**

- You can purchase and download third party applications to read these files.

### **What should I do if my tablet won't recognize the microSD™ card?**

- Make sure that you have inserted a certified microSD card.
- Make sure that you have inserted a microSD card correctly and securely.
- With the microSD card inserted, turn off your tablet, then turn it back on.
- Make sure that you are attempting to view your files in the correct location on your tablet. Go to a file management app, such as the Gallery app, to view your files.


### **What should I do if I can't access the web?**

- Check the wireless signal indicator in the status bar at the top of the screen.
- If there is no signal, you are not connected.
- Make sure that Wi-Fi is turned on. See [\*\*Connect to a Wi-Fi network\*\*](#).
- Make sure that you select the right network and enter the correct password. See [\*\*Connect to a Wi-Fi network\*\*](#).



- Restart your router, then reconnect to Wi-Fi.


### **What should I do if there is no sound coming from my tablet?**

- If listening through headphones, unplug and reconnect your headphones.
- Make sure that the connector is pushed in all the way.
- If listening through your tablet's speakers, unplug any devices connected to the headphone jack.
- The volume may be muted or set too low. Increase the volume setting. See [Adjust the volume](#).
- Check the software volume in  **Settings**. See [Adjust system sounds](#).

### **Why is the actual storage less than storage in the specification?**

- Your tablet has the full amount of storage listed in the specification. However, some of this space is used for system applications and data files.



### **What should I do if the display freezes or does not respond?**

- Press and hold the  button for 10 seconds to turn off your tablet, then turn it back on.
- Use a paper clip to press the **Restart** hole on the side of your tablet. You will not lose data. Note: For factory reset instructions, see [Reset to default settings](#).

### **What is safe mode?**

- Your tablet enters safe mode when its operating system errors or an application causes it to malfunction. Turn off your tablet, then turn it back on to exit safe mode.

## **Spec**

LCD	7" diagonal panel, 1024*600 TN, LED backlit, Capacitive 5-Point Touch Panel
CPU	RK3126B Quad Core Cortex-A7 ARM 1.2GHz
OS	Android™ 5.1, Lollipop
RAM	512MB DDR3
Flash	8GB flash, expandable microSD slot (up to 64 GB)
Cam	0.3 megapixel front, 2.0 megapixel rear
WiFi	802.11 b/g/n
Gravity	3D gravity sensor
Music format	MP3, WMA, OGG, FLAC, AAC, WAV
Video format	MKV, AVI, RM, RMVB, MP4, MOV, VOB, DAT, FLV, 3GP, WMV, H.263HP
Picture format	JPG, JPEG, BMP, GIF
Record format	AMR
Speaker	Mono
Battery	Lithium polymer 3.7V/2500mAh, approximate 4 hours video playback
AC adapter	Input: AC 100-240V 50/60Hz max 0.4A Output: 5.0V  1.5A 

## **Maintenance**

- Keep your tablet dry.
- Avoid exposing your tablet to extreme hot or cold temperatures.
- Avoid placing your tablet close to lit cigarettes, open flames, or any heat source.
- Do not drop, knock, or shake your tablet. Rough handling may break internal circuit boards.
- Keep your tablet in a clean and dust-free place.

**Disclaimer:** MJS does not recommend the use of any ammonia or alcohol-based cleaners on the LCD screen or plastic casing.

Some chemical cleaners have been reported to damage the screen or display case. MJS will not be liable for damage resulting from the use of any ammonia or alcohol-based cleaners.

## **Safety Information**

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this product near water. Do not touch your device with wet hands.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

- Do not expose the device to direct sunlight.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the product.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this device during lightning storms or when unused for long periods of time.
- To reduce the risk of fire or electric shock, do not expose this device to rain, moisture, dripping, or splashing.
- Do not crush or puncture the product. Avoid exposing the device to high external pressure. Do not operate the device in a very cold or very hot temperature, such as in cold weather or in an un-air-conditioned motor vehicle during intense heat.

### **Legal notices**

Android, Google, Google Play, Gmail and other marks are trademarks of Google, Inc.

### **FCC Warning**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

### **FCC Part 15**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC

Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generate, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Warning:**

Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this equipment.

**Note:**

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

## **Six-Months Limited Warranty**

### **Definitions:**

MJS warrants to you, the original purchaser of this new product (“Product”), that the Product shall be free of defects in the original manufacturer of the material or workmanship for a period of six months from the date of your purchase of the Product (“Warranty Period”).

For this warranty to apply, your Product must be purchased in the United States or Canada from a MJS’s channel and is packaged with this warranty statement.

### **How long does the coverage last?**

The Warranty Period lasts for six months from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

### **What does this warranty cover?**

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized MJS repair center, MJS will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of MJS and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your MJS Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

**How to obtain warranty service?**

If you purchased the Product at a MJS's channel location, please take your original receipt and the Product. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. If you purchased the Product from an online web site, mail your original receipt and the Product to the address listed on the web site. Make sure that you put the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain warranty service, in the United States call 1-855-963-4546. Call agents may diagnose and correct the issue over the phone.

**Where is the warranty valid?**

This warranty is valid only in the United States and Canada at MJS's channel locations or websites to the original purchaser of the product in the county where the original purchase was made.

**What does the warranty not cover?**

This warranty does not cover:

- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to weather, lightning, and other acts of God, such as power surges
- Accidental damage
- Misuse

- Abuse
- Negligence
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home
- Modification of any part of the Product, including the antenna
- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in)
- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by MJS to service the Product
- Products sold “as is” or “with all faults”
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.)
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.



REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. MJS SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. MJS PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

For customer service please call 1-855-963-4546

[www.mjshk.com](http://www.mjshk.com)

MJS is a trademark of MJS and its affiliated companies.

©2015 MJS Technology Co., Limited. All rights reserved.

Made in China